



# NOZZLE THREAD ELBOW ADAPTER

Instructions Guide

## K-IT NOZZLE THREAD TO 1/4 IN. TUBING ELBOW ADAPTER


*Convert spray heads to point-source  
drip irrigation. Water only where needed.*



### INSTALLATION GUIDE


1. Remove the existing spray nozzle: Unscrew the nozzle from the top of your pressure regulated shrub adapter or supply line.
2. Thread on the elbow adapter: Screw the female nozzle thread of the elbow adapter onto the male nozzle thread. Hand-tighten securely.
3. Connect 1/4 in. tubing: Push 1/4 in. drip tubing onto the barb end of the elbow. Insert at least 1/4 in. of tubing for a secure, leak-free fit.
4. Run tubing to plants: Route the tubing to each plant base. Use stakes to hold tubing in place. Add emitters where needed for precise watering.
5. Turn on water and test: Check all connections for leaks. Verify even flow from each emitter. Adjust layout as needed.

1

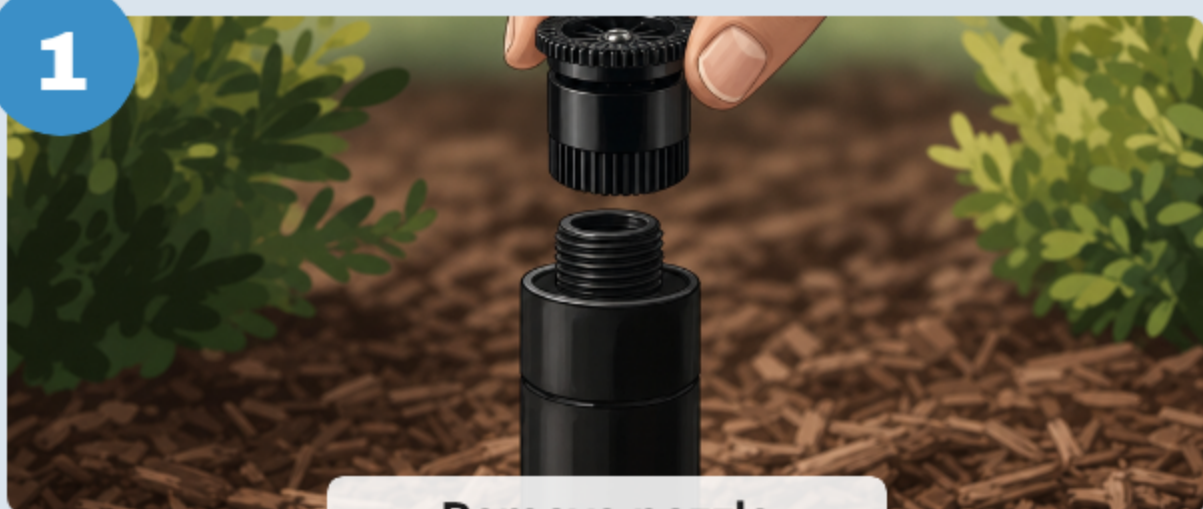


Remove nozzle

2

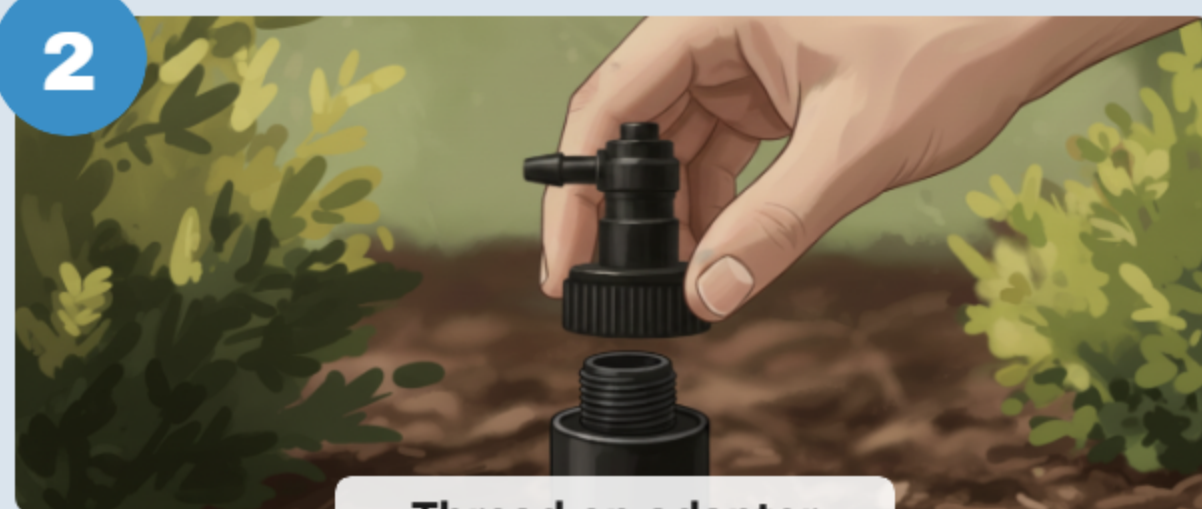

Thread on adapter

3

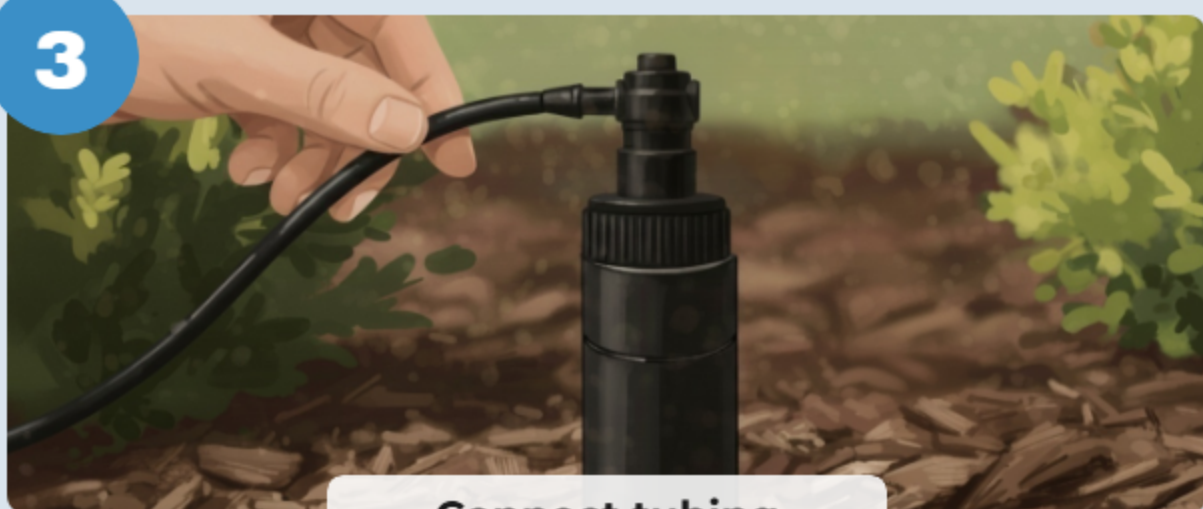

Connect tubing

4



Test & verify

### TIPS & REMINDERS

- Push tubing at least 1/4 in. onto barb for a secure fit.
- Working pressure: 0–40 PSI.
- Elbow directs tubing in one direction for clean routing.
- Use with a pressure regulator for best results.

