



NOZZLE THREAD TEE ADAPTER

Instructions Guide

K-IT NOZZLE THREAD TO 1/4 IN. TUBING TEE ADAPTER


*Convert spray heads to point-source
drip irrigation. Water only where needed.*



INSTALLATION GUIDE


1. Remove the existing spray nozzle: Unscrew the nozzle from the top of your pressure regulated shrub adapter or supply line.
2. Thread on the tee adapter: Screw the female nozzle thread of the tee adapter onto the male nozzle thread. Hand-tighten securely.
3. Connect 1/4 in. tubing: Push 1/4 in. drip tubing onto each barb end of the tee. Insert at least 1/4 in. of tubing for a secure, leak-free fit.
4. Run tubing to plants: Route the tubing to each plant base. Use stakes to hold tubing in place. Add emitters where needed for precise watering.
5. Turn on water and test: Check all connections for leaks. Verify even flow from each emitter. Adjust layout as needed.

1

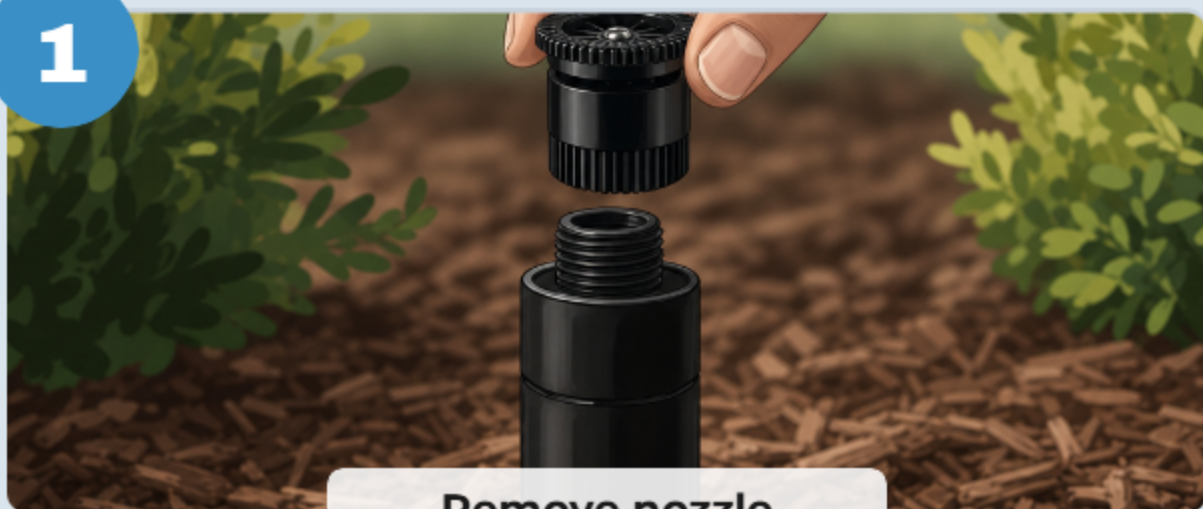


Remove nozzle

2

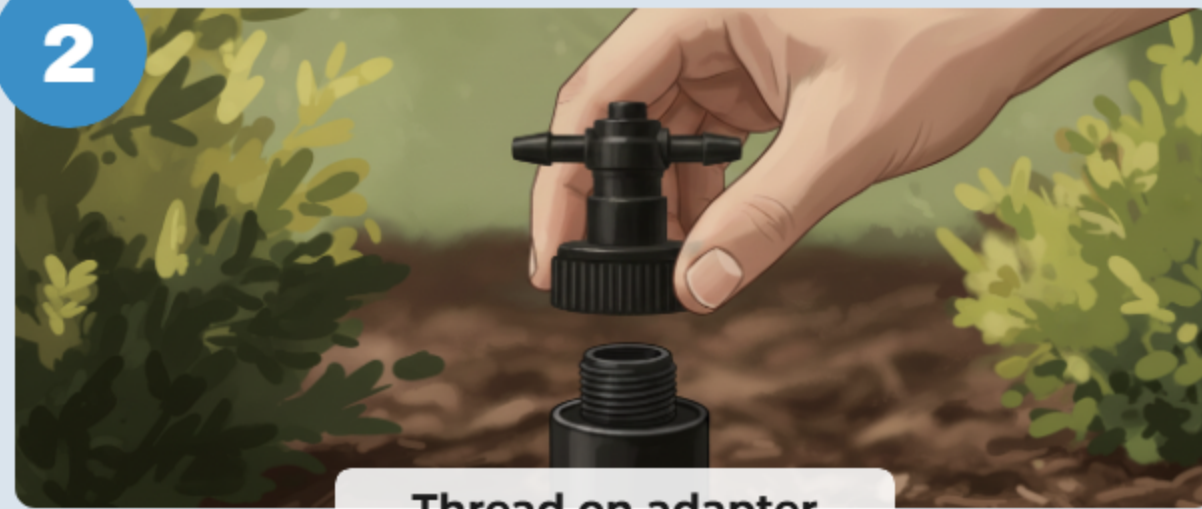

Thread on adapter

3

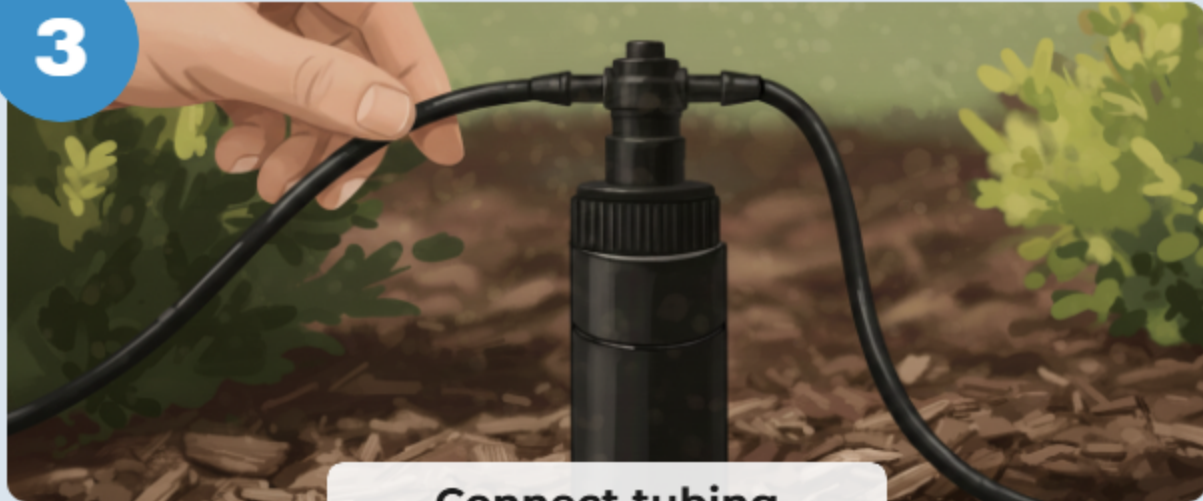

Connect tubing

4



Test & verify

TIPS & REMINDERS

- Push tubing at least 1/4 in. onto barb for a secure fit.
- Working pressure: 0–40 PSI.
- Compatible with standard emitters and drip components.
- Use with a pressure regulator for best results.

